Manual



Your Best Learning Companion



Foreword

Thank you for choosing the EtutorStar Learning Pen.

The EtutorStar Learning Pen is a combination of the optical recognition technology and speech synthesis. It is a learning product by the latest advance digital technology.

The EtutorStar Learning Pen can be used with 'Hao Peng You' 'Zhi Shi Hua Bao' 'Zhi Shi Bao' and 'New Friends' 'New World' 'New Express' learning magazines published from 2015 and coming years. It can also be used with EtutorStar voice-enhance learning and reading series.

The EtutorStar Learning Pen is a great learning tool for listening, oral and reading practices. It helps to re-enforce learning and enhance language skills anytime anywhere, making language learning easier and more efficient.

The EtutorStar Learning Pen is well-designed. It is compact, lightweight, portable and easy to use. It comes with accurate pronunciation. It has built-in memory card, while supporting MP3 audio playback and music player. It helps to make learning more interactive and diversify.

The EtutorStar Learning Pen is a great assistant to parents and the best companion to children's learning.

For more details, please browse: www.EtutorStar.com


Contents

1.	duction	. 4	
	1.1	Product Appearance	
	1.2	Button Description	
2.	Basic (Operation	. 5
	2.1	Charging of Lithium Battery	
	2.2	Power On	
	2.3	Power Off	
	2.4	Tap To Read	
	2.5	Downloading Audio File	
3.	Additi	onal Functional Operation	. 7
	3.1	Recording Function	
	3.2	Read Along Function	
	3.3	MP3 Function	
4.	Troubl	eshooting	8
5.	使用手	EATT	9

Introduction



1.1 EtutorStar Learning Pen Appearance

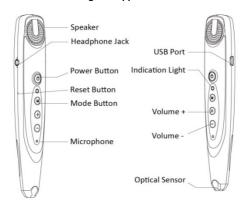

1.2 Button Description

- Power Button 🔘 :
 - Hold on for 3 seconds to On/Off the power.
 - Hold for less than 3 seconds to switch to recording mode
- - Hold on for 3 seconds to change the mode (Tap to Read/Read Along/ MP3).
 - Hold on for less than 3 seconds to pause, resume by pressing the Mode button again.
 - Volume Button 🛈 / 🔘 :
 - Hold on for 3 seconds to switch file;
 - Hold for less than 3 seconds to adjust the volume.

Basic Operation

2.1 Charging of Lithium Battery

EtutorStar Learning Pen is built-in with lithium battery. Connect the USB cable with the USB Port and the Adapter provided. Alternatively, you may connect USB cable with a computer for charging. The Indication light will turn red when EtutorStar Learning Pen is charging, turn blue when it is fully-charged.

2.2 Power On

Press the Power button (3 seconds) to start and you will hear a Welcome greeting. Indication light will turn blue after the button is released to use.

EtutorStar Learning Pen can be used while charging. Press the Power button (1 second) to use when the indication light turns blue.

2.3 Power Off

Press the Power button of for 3 seconds to shut down and you will hear a voice prompt.

2.4 Tap to Read

- (1) Select EtutorStar compatible student magazines or audio book series. Simply use the tip of the EtutorStar Learning Pen to tap on the Magazine's title on the cover; Book title or EtutorStar Logo on the book cover or Internal cover page.
- (2) Tap the contents which have layered with special audio code.
- (3) Please keep at the angle of 70 to 90 between the tip of the pen and the reading material surface. EtutorStar Learning Pen can be used together with ear pieces.

2.5 Downloading Audio File



- The EtutorStar Learning Pen has built-in memory card, you can download the audio files of relevant learning material files into the memory card.
- (2) Firstly, visit <u>www.EtutorStar.com</u> (or relevant websites) via computer, select the audio file and download them to the computer.
- (3) Connect the USB cable of EtutorStar Learning Pen to the computer USB port. The EtutorStar memory card drive name (E.g. ET-80X) will appear on the computer upon successful connection.
- (4) Select the relevant audio file, copy and paste the audio file to the corresponding folder:

■ Tap to Reading files → AP4 Folder

■ MP3 / Music files → MP3 Folder

■ Recording files → Recorder Folder

■ Dictionary files → DIC Folder

- Subdir Folder: System Folder. Please do not delete any files in this folder
- (5) Please delete unneeded file(s) if it shows not enough memory when downloading files into EtutorStar Learning Pen memory card. Before you delete the files, it is recommended to copy and backup the files you wish to delete to a computer or other storage devices for future use.

Additional Functional Operation

3.1 Recording Function

- Simply press the Power button to start recording.
- Press the Power button again to stop recording.
- Press the Mode button to play the recording.
- Press the Volume button up to 3 seconds to return to the previous recording.

3.2 Read Along Function

- Press the Mode button for 3 seconds to enter the Read Along Mode.
- Tap on the content you wish to Read Along.
- Follow the instruction to Read Along, after the sound "Du".
- Wait for few seconds to listen to the original audio again then following your Read Along recording. You may compare your recording with the original audio.
- Hold on to the Mode button for 3 seconds to MP3 function, hold for another 3 seconds to return to the Reading mode.

3.3 MP3 Function

- Press the Mode button to play the file in MP3 folder.
- Select file by pressing the Volume button () for 3 seconds.
- Adjust the volume by press the Volume button less than 3 seconds.

Troubleshooting

Problems	Solutions
Automatic shutdown	Standby time exceed 3 minutes, restart to use.
After the file is stored in non-reactive	Please check whether the file is stored in the corresponding folder. Refer 2.5.
Cannot record	Please check whether the recording audio file is too large to store. Refer 2.5
Cannot power on	Please press the reset button with a needle. Charge the battery to use.
Unable to copy file	Check whether the memory card is full; delete unnecessary files (Refer 2.5); Check whether the USB cable is properly connected. Check whether the USB connector is in good condition.
The sensor is not working; no audio	Check if the file is correctly pasted to the corresponding file; Check whether the EtutorStar Learning Pen is switched to the reading mode. Check whether the sensor pointing at the correct cover / issue number / title.

Special Note:

- Do not disassemble the EtutorStar Learning Pen, which will affect its proper working and warranty.
- When the battery is running low and the indication light turns red, please use the adapter and USB cable provided for charging.
- When experience operating abnormalities, please turn off the EtutorStar Learning Pen by pressing the Reset button to restart.

前言

感谢您选购易笔通学习笔。

易笔通学习笔是一款集合了光学图像识别、先进语音合成技术的高新数码辅助学习产品。

易笔通学习笔,可点读 2015 年及之后出版的带EtutorStar 编码的《好朋友》《知识画报》《知识报》/《新朋友》《新天地》《新列车》系列学生辅助学习刊物; EtutorStar 有声辅助学习教材系列,以及带有EtutorStar 点读编码的出版刊物。

易笔通学习笔,配合根据学生学习要求编写的系列有声辅助教材或阅读材料,将听、读、看融合为一体,是听力、口试、阅读训练的好工具,全方位提升听、说、读等能力,使学习更方便、更有效率。

易笔通学习笔,小巧轻便,随时随地,随点随读,使学习更方便灵活。内置大容量内存卡,通过电脑下载扩充点读学习资源,使学习具有延续性和扩展性。录音功能、复读跟读特性,同时支持 MP3 语音和音乐播放,使学习更具互动性、多元化。

易笔通学习笔,是家长辅导孩子学习的好助手,学生高效学习的好伙伴。


目录

产品	介	绍11
1	.1	产品外观图11
1	.2	按键说明11
基本	操	作12
2	.1	锂电池充电12
2	.2	开机12
2	.3	关机12
2	.4	点读使用12
2	.5	点读音档下载13
附加	1功	能操作14
3	.1	录音功能14
3	.2	跟读功能14
3	.3	MP3 功能14
故障	自	检15

产品介绍



1.1 产品外观图

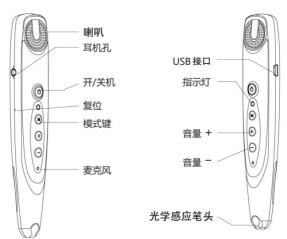

1.2 按键说明

• 开关机键 : 长按开关机; 短按进入录音

• 模式键 (M): 长按切换点读/跟读/MP3模式 短按暂停,再按恢复播放

• 音量键 🕒 🕒 : 长按文件切换, 短按音量增加/减小

说明:

长按,指按住按钮时间3秒以上 短按,指操作按钮时间在1秒以下。

基本操作

2.1 锂电池充电

"易笔通"学习笔采用了内置锂电池。将配置的 USB 线一边插入"易笔通"的 Mini USB 接口,另一端插入配置的充电插头,插头接入 220V 电源插座。或是把 USB 线的另一端直接连接电脑 USB,通过电脑进行充电。

充电过程中,"易笔通"电源指示灯呈红色;充满电后, 电源指示灯呈蓝色。

2.2 开机

长按开关按键 ⁽¹⁾ 至欢迎使用提示音响起,同时指示灯亮蓝色,松开开关按键,进入使用状态。

"易笔通"学习笔,可以边充电边使用,充电时短按开关按键 ⁽⁽⁾⁾,指示灯亮蓝色,同时听到开机提示音,进入使用状态。

2.3 关机

在工作状态下长按开关按键 ¹⁰⁰ 3 秒钟至播放结束语音, 进入关机状态。

2.4 点读使用

- (1) 选书:选择需要点读的有声辅学习或阅读材料的刊名/书名。用"易笔通"学习笔点按刊物封面刊名;相关书本封面或内页的书名,或"易笔通"点读标志。选书正确,"易笔通"学习笔将读出刊物或书名的声音。
- (2) 内容点读:在完成上述(1)相关书刊的选书步骤后,点击书刊页面带有点读铺码的文字内容,即可进行点读学习。

(3) 点读操作: 笔头与书本之间保持 70-90 度斜角为最佳的点读角度。用笔头轻点带有铺码的文字内容, "易笔通"学习笔喇叭将即时读出语音。也可以使用耳机辅助收听。点读过程的声音朗读或录音控制,可用学习笔点按页面上附印的控制图标进行操作,方便快捷。

2.5 点读音档下载

扫描观看下载说明视频



- (1) "易笔通"学习笔内置存储内存。您可以下载 **间**子。相关点读学习文档,或学习用途的 MP3 音档至内存卡。
- (2) 首先使用电脑,浏览 <u>www.EtutorStar.com</u> (或相关资源下载网站),选择您要的点读学习文档或其他学习音档,下载并保存到电脑中。
- (3) 用配置的 USB 线连接"易笔通"学习笔和电脑。这时"易笔通"学习笔相当于一个 U 盘。连接成功后,可以在电脑上看到"易笔通"学习笔内存卡名称(如: ET-80X)。
- (4) 在电脑中拷贝上述说明(2) 中下载的文档,根据下面的说明粘贴到"易笔通"学习笔内存卡的相应文件夹里:
 - 学习资源点读文件
- → AP4 文件夹
- MP3 学习或音乐文档
 - → MP3 文件夹
- 录音文档自动保存在
- ▶ RECORDER 文件夹

• 词典文件

- → DIC 文件夹
- Subdir 系统文件夹: 请勿删除任何文档。
- (5) 当下载转存资源到"易笔通"学习笔内存卡,提示存储空间不足时,请整理清除"易笔通"学习笔内存卡上没有用或暂时没有用的文档。清除文档时,建议把相关文档备份到电脑或其他存储设备上,以备将来重新使用的需要。

附加功能操作

3.1 录音功能

- 在任何模式下,短按开关按键 , 一键录音。录音完成时再按开关按键停止录音。
- 按模式键 M 播放用户的录音
- 长按音量键 🚭 播放上一条录音。

3.2 跟读功能

- "易笔通"学习笔开机后,长按模式键[™],进入跟读模式。
- 点按书刊带有编码的内容,播放朗读完该内容后, "易笔通"发出录音指示音时,用户朗读同一篇内容, 同时被"易笔通"录音。录音时间是点读语音播放时 间的 1.5 倍。
- 录音结束后, "易笔通"播放原文配音及用户朗读录音。用户通过对比自己的录音和原文配音,评估自己的语音朗读情况。
- 退出跟读模式:长按模式键 ⁽¹⁾,进入 MP3 功能;再 长按模式键,回到点读模式。

3.3 MP3 功能

- 长按模式键 (()) 自动播放储存卡中存储的 MP3 音乐文件。
- 可以通过长按音量键 (一) 进行文件切换。 短按音量键,进行声音大小调节。

故障自检

显示状况	检查 / 解决方案
自动关机	待机时间超过设定的3分钟,点读笔将自动 关机;使用时请重新开机。
下载文件存 入后无反应	音档文件是否保存在正确的 MP4 文件夹。 请参照 2.5 的说明。
无法录音	录音时间过长,导致内存不足。 请清理内存。请参照 2.5 说明。
无法开机	请用针状物点按笔的复位键,充电后再试。
无法从电脑 复制文件	1. 内存卡空间已满,删除不需要的音档文件。(请参照 2.5 说) 2. 检查笔和电脑两端的 USB 数据线是否联接好。 3. 确认电脑的 U 盘操作正常。
点读有声书/ 报没有声音 或朗读发音 错误	1. 检查笔中是否有相应有声书/报的音档。 2. 检查学习笔是否切换在点读模式。 3. 检查是否点读书/报上用于点读选书操作的标题或刊名。 4. 确认点读的书/报附有 EtutorStar 铺码。

温馨提示

- "易笔通"学习笔光学感应笔头有精密光学识别元件,请 勿擅自拆开,影响点读笔功能、影响保修条款。
- 指示灯红色闪烁时,请及时用专属电源适配器和 USB 线进 行充电。
- 操作异常时,可以按下复位键进行关机重启。

Wishing you all the best in your study!

More EtutorStar Voice-enhanced Learning Series & Etutor Learning products and services

www.EtutorMall.com



Customer Service hotline:

(65) 6742 7555

service@ecombay.com

E-COM EDUCATION International Pte Ltd

33 Ubi Ave 3 #03-23 Tower A Vertex Singapore 408868 Tel: (65) 6742 7555 Fax: (65) 6234 6782 service@ecombay.com